

# AUTODWFPUBLISH system variable

1335 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2267

## Function Description:

The **AUTODWFPUBLISH** system variable is used to control whether to create a DWF file automatically when saving or closing a DWG file.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** :turn off automatic publishing to DWF files when saving or closing a DWG file

**1** : turn on automatic publishing to DWF files when saving or closing a DWG file

Online URL: <https://kb.gstarcad.com.my/article/autodwfpublish-system-variable-1335.html>