

BGRIPOBJSIZE system variable

1345 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2151

Function Description:

The **BGRIPOBJSIZE** system variable is used to set displaying size of customized grip relative to screen in block editor.

Type : Integer

Saved in : Registry

Initial value : 8

Range : 1 ~ 255

The valid value is an integer between 1 and 255.

Online URL: <https://kb.gstarcad.com.my/article/bgripobjsize-system-variable-1345.html>