

BPARAMETERCOLOR system variable

1350 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2525

Function Description:

The **BPARAMETERCOLOR** system variable is used to set parameter color in block editor.

Type : Strings

Saved in : Registry

Initial value : 170

Range : 1 ~ 255

The valid value includes **BYLAYER**, **BYBLOCK**, and integers from 1 to 255. The True color is a strings with RGB in front and each value is separated by a comma. It is entered as the following way:
RGB:000,000,000

Online URL: <https://kb.gstarcad.com.my/article/bparametercolor-system-variable-1350.html>