

# BTMARKDISPLAY system variable

1354 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 2424

## Function Description:

The **BTMARKDISPLAY** system variable is used to control whether to display value set marker for dynamic block reference.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : specify to not display value set marker

**1** : specify to display value set marker

Online URL: <https://kb.gstarcad.com.my/article/btmarkdisplay-system-variable-1354.html>