

CELTSCALE system variable

1360 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2180

Function Description:

The **CELTSCALE** system variable is used to set scale factors for current object line type.

Type : Real

Saved in : Drawing

Initial value : 1.0000

Online URL: <https://kb.gstarcad.com.my/article/celtscale-system-variable-1360.html>