

## DATE system variable

1398 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 2349

### Function Description:

The **DATE** system variable is used to store current date and time in specified format.  
(Read-Only)

**Type :** Real

**Saved in :** Not saved

**Initial value :** Unknown

Online URL: <https://kb.gstarcad.com.my/article/date-system-variable-1398.html>