

DIMADEC system variable

1413 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 881

Function Description:

The **DIMADEC** system variable is used to control the number of precious places displayed in angular dimensions.

Type Integer

Saved in Drawing

Initial value 0

System Variable Value:

-1: the number of precious places for angular dimensions is specified by **DIMDEC**

0 ~ 8 : specify the displayed number of precious places for angular dimensions (independent of DIMEDC)

Online URL: <https://kb.gstarcad.com.my/article/dimadec-system-variable-1413.html>