

DIMBLK1 system variable

1431 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 938

Function Description:

The **DIMBLK1** system variable is used to set arrowhead for the first end of extension line when the DIMSAH is on.

Type : Strings

Saved in : Drawing

Initial value : ""

Users could enter a Period "." to restore default settings.

Note: the annotative block could not be used as customized arrow for dimensions and leaders.

Online URL: <https://kb.gstarcad.com.my/article/dimblk1-system-variable-1431.html>