

## DIMBLK2 system variable

1432 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 961

### Function Description:

The **DIMBLK2** system variable is used to set arrowhead for the second end of extension line when the **DIMSAH** is on.

**Type :** Strings

**Saved in :** Drawing

**Initial value :** ""

Users could enter a Period "." to restore default settings.

Note: the annotative block could not be used as customized arrow for dimensions and leaders.

Online URL: <https://kb.gstarcad.com.my/article/dimblk2-system-variable-1432.html>