

## DIMTFILLCLR system variable

1446 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 843

### Function Description:

The **DIMTFILLCLR** system variable is used to set color for the background of dimension text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

The color number displays in "Select Color" dialog box. Users could select "**BYBLOCK**" by entering "0"; they could also select "**BYLAYER**" by entering "256."

Online URL: <https://kb.gstarcad.com.my/article/dimtfillclr-system-variable-1446.html>