

# DIMTOLJ system variable

1453 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 933

## Function Description:

The **DIMTOLJ** system variable is used to set vertical justification for tolerance values relative to surface dimension text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1(Imperial) or 0(Metric)

This system variable will not work unless the **DIMTOL** set to be on. The default value for **DIMTOL** is off.

## System Variable Value:

**0** : bottom

**1** : center

**2** : top

Online URL: <https://kb.gstarcad.com.my/article/dimtolj-system-variable-1453.html>