

DIMLWE system variable

1467 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 690

Function Description:

The **DIMLWE** system variable is used to specify lineweight for extension line.

Type : Enum

Saved in : Drawing

Initial value : -2

Range : 0,5,9,13,15,18,20,25,30,35,40,50,53,60,70,80,90,100,106,120,140,158,200,211

System Variable Value:

-3 : default(the default value is controlled by LWDEAULT system variable)

-2 : byblock

-1 : bylayer

Online URL: <https://kb.gstarcad.com.my/article/dimlwe-system-variable-1467.html>