

DIMSD2 system variable

1472 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 724

Function Description:

The **DIMSD2** system variable is used to control whether to hide the second dimension line and arrowhead.

Type : Parameter

Saved in : Drawing

Initial value : Off

If this system variable set to on, it hides the extension line and arrowhead between the first extension line and text.

System Variable Value:

Off : display the second dimension line

On : hide the second dimension line

Online URL: <https://kb.gstarcad.com.my/article/dimsd2-system-variable-1472.html>