

# DIMTFAC system variable

1479 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 872

## Function Description:

The **DIMTFAC** system variable is used to set the scale factor for text height of fraction and tolerance relative to dimension text height. This has the same effect as settings of DIMTXT system variable.

**Type :** Real

**Saved in :** Drawing

**Initial value :** 1.0000

Online URL: <https://kb.gstarcad.com.my/article/dimtfac-system-variable-1479.html>