

# DIMTSZ system variable

1482 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1032

## Function Description:

The **DIMTSZ** system variable is used to specify the size of oblique strokes drawn instead of arrowheads for linear, radius, and diameter dimension.

Type : Real

Saved in : Drawing

Initial value : 0.0000

## System Variable Value:

**0** : draw arrowheads

**>0** : draw oblique strokes instead of arrowhead. The size of oblique strokes is control by **DIMTSZ** system variable multiplied by the value of **DIMSCALE** system variable.

Online URL: <https://kb.gstarcad.com.my/article/dimtsz-system-variable-1482.html>