

## DIVMESHPIRHEIGHT system variable

1500 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 1032

### Function Description:

The **DIVMESHPIRHEIGHT** system variable is used to set the number of subdivisions from the base to top of mesh pyramid.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 3

This setting could affect the new mesh pyramid created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL: <https://kb.gstarcad.com.my/article/divmeshpyrheight-system-variable-1500.html>