

# DIVMESHCYLAXIS system variable

1502 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 975

## Function Description:

The **DIVMESHCYLAXIS** system variable is used to set the number of subdivisions around the base perimeter of mesh cylinder.

**Type** : Integer

**Saved in** : User-settings

**Initial value** : 8

This setting could affect the new mesh cylinder created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL: <https://kb.gstarcad.com.my/article/divmeshcylaxis-system-variable-1502.html>