

# DIVMESHTORUSPATH system variable

1506 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 937

## Function Description:

The **DIVMESHTORUSPATH** system variable is used to set the number of subdivisions along path swept by mesh torus.

Type : Integer

Saved in : User-settings

Initial value : 8

This setting could affect the new mesh torus created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL: <https://kb.gstarcad.com.my/article/divmeshtoruspath-system-variable-1506.html>