

DIVMESHWEDGEBASE system variable

1508 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 783

Function Description:

The **DIVMESHWEDGEBASE** system variable is used to set the number of subdivisions from the wedge perimeter middle point to triangle dimension.

Type : Integer

Saved in : User-settings

Initial value : 3

This setting could affect the new mesh wedge created by **MESH** command. This value could also be set in "Mesh Primitive Option" dialog box.

Online URL: <https://kb.gstarcad.com.my/article/divmeshwedgebase-system-variable-1508.html>