

DWGCODEPAGE system variable

1524 GstarCAD MY /KW July 14, 2021 [System Variables](#) 0 951

Function Description:

The **DWGCODEPAGE** system variable is used to store the same value as the **SYSCODEPAGE** system variable for compatibility.

(Read-Only)

Type : Strings

Saved in : Not saved

Initial value : Unknown

Online URL: <https://kb.gstarcad.com.my/article/dwgcodepage-system-variable-1524.html>