

# FACETERMAXEDGELENGTH system variable

1555 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 877

## Function Description:

The **FACETERMAXEDGELENGTH** system variable is used to set the maximum length of mesh object edge when converting from solids or surfaces to mesh objects.

Type : Real

Saved in : User-settings

Initial value : 0.0000

The **FACETERMAXEDGELENGTH** system variable could be a any non-negative, including 0.

Note: this system variable reflects the absolute value of objects whose smoothness is zero.

Online URL: <https://kb.gstarcad.com.my/article/facetermaxedgelength-system-variable-1555.html>