

FACETERMINUGRID system variable

1558 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 863

Function Description:

The **FACETERMINUGRID** system variable is used to set internal parameters.

Type : Real

Saved in : User-settings

Initial value : 0

Range : 0 ~ 1023

The value of **FACETERMINUGRID** could not be larger than **FACETERMAXGRID**.

Online URL: <https://kb.gstarcad.com.my/article/faceterminugrid-system-variable-1558.html>