

FULLOPEN system variable

1573 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 946

Function Description:

The **FULLOPEN** system variable is used to indicate whether the current drawing is partly opened or not.

(Read-Only)

Type : Integer

Saved in : Not saved

Initial value : 1

Range : 0,1

System Variable Value:

0 : indicate that the drawing is partly opened

1 : indicate that the drawing is fully opened

Online URL: <https://kb.gstarcad.com.my/article/fullopen-system-variable-1573.html>