

# GRIDUNIT system variable

1589 GstarCAD MY /KW July 15, 2021 [System Variables](#) 0 1067

## Function Description:

The **GRIDUNIT** system variable is used to specify the grid space (in X and Y directions) in current viewport.

**Type :** 2D point

**Saved in :** Drawing

**Initial value :** (0.5000,0.5000)(Imperial) or (10,10)(Metric)

To specify the default grid space to be snap space, please set the GRIDUNIT to be 0.0. All changes will display in grid after regenerating view.

Online URL: <https://kb.gstarcad.com.my/article/gridunit-system-variable-1589.html>