

HALOGAP system variable

1605 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 1000

Function Description:

The **HALOGAP** system variable is used to specify the gap when one objects hidden by another object.

Type : Integer

Saved in : Drawing

Initial value : 0

The value of **HALOGAP** system variable is specified by a percent of one unit and is independent of the zoom level.

Online URL: <https://kb.gstarcad.com.my/article/halogap-system-variable-1605.html>