

# HPINHERIT system variable

1620 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 929

## Function Description:

The **HPINHERIT** system variable is used to control whether to inherit the hatch origin when using the Inherit Properties option in HATCH and HATCHEDIT.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : the origin of hatch is gotten by HPORIGIN

**1** : the origin of hatch is gotten hatch objects

Online URL: <https://kb.gstarcad.com.my/article/hpinherit-system-variable-1620.html>