

# HPMAXLINES system variable

1622 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 813

## Function Description:

The **HPMAXLINES** system variable is used to set the maximum of hatch lines generated when hatching.

**Type :** Real

**Saved in :** Registry

**Initial value :** 300000

**Range :** 10 ~ 10000000

Online URL: <https://kb.gstarcad.com.my/article/hpmaxlines-system-variable-1622.html>