

INSBASE system variable

1636 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 886

Function Description:

The **INSBASE** system variable is used to store the insertion base point of BASE command by current UCS coordinates.

Type : 3D point

Saved in : Drawing

Initial value : 0.0000,0.0000,0.0000

Online URL: <https://kb.gstarcad.com.my/article/insbase-system-variable-1636.html>