

INSNAME system variable

1637 GstarCAD MY /KW July 16, 2021 [System Variables](#) 0 839

Function Description:

The **INSNAME** system variable is used to set the default block name for INSERT command.

Type : Strings

Saved in : Not saved

Initial value : ""

This name should qualify symbol name rules. If no default value for the **INSNAME** system variable, it returns "". Inputting a period "." to specify no default value.

Online URL: <https://kb.gstarcad.com.my/article/insname-system-variable-1637.html>