

LASTPROMPT system variable

1652 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 916

Function Description:

The **LASTPROMPT** system variable is used to store the last string to echo to the command prompt.
(Read-Only)

Type : Strings

Saved in : Not saved

Initial value : ""

This string is the same as the last line seen at the Command prompt and includes any user input

Online URL: <https://kb.gstarcad.com.my/article/lastprompt-system-variable-1652.html>