

LOFTANG2 system variable

1675 GstarCAD MY /KW July 19, 2021 [System Variables](#) 0 751

Function Description:

The **LOFTANG2** system variable is used to set the draft angle through the last cross section in the loft operation.

Type : Real

Saved in : Drawing

Initial value : 90

Range : 0 ~ 360

The 0 direction is measured outward from the curve on the plane of the curve. The positive direction is measured toward the next cross section.

Online URL: <https://kb.gstarcad.com.my/article/loftang2-system-variable-1675.html>