

LOGINNAME system variable

1683 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 925

Function Description:

The **LOGINNAME** system variable is used to display current login users name, and store it together with DWG file and relation documentation properties statistic information.

(Read-Only)

Type : Strings

Saved in : Not saved

Initial value : Unknown

Online URL: <https://kb.gstarcad.com.my/article/loginname-system-variable-1683.html>