

LUPREC system variable

1687 GstarCAD MY /KW July 21, 2021 [System Variables](#) 0 793

Function Description:

The **LUPREC** system variable is used to set display precious for linear units and coordinates.

Type : Integer

Saved in : Drawing

Initial value : 4

Range : 0 ~ 8

No matter how to set the display precious, the value for distance, area, and volume and linear coordinate internal precious are always maintained. The **LUPREC** does not have effect on dimension text. The dimension text is controlled by **DIMDEC** system variable and saved together with dimension styles.

Online URL: <https://kb.gstarcad.com.my/article/luprec-system-variable-1687.html>