

OBSCUREDLTTYPE system variable

1720 GstarCAD MY /KW July 22, 2021 [System Variables](#) 0 885

Function Description:

The **OBSCUREDLTTYPE** system variable is used to specify the linetype of obscured lines.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0 ~ 11

The obscured line is a kind of hidden lines. Users could change its color and linetype to make it visible. The **OBSCUREDCOLOR** system variable could only be used in 2D viewport. In 3D viewport users should use the **VSOBSCUREDCOLOR** system variable.

System Variable Value:

- 0 : off
- 1 : solid
- 2 : dashed
- 3 : dotted
- 4 : short dash
- 5 : medium dash
- 6 : long dash
- 7 : double short dash
- 8 : double medium dash
- 9 : double long dash
- 10 : medium long dash
- 11 : sparse dot

Online URL: <https://kb.gstarcad.com.my/article/obscuredlttype-system-variable-1720.html>