

PFACEVMAX system variable

1742 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 690

Function Description:

The **PFACEVMAX** system variable is used to set the maximum number of vertex in polyfaces.
(Read-Only)

Type : Integer
Saved in : Not saved
Initial value : 4

This system variable only has effect on traditional polyfaces that created by **PFACE**.

Online URL: <https://kb.gstarcad.com.my/article/pfacevmax-system-variable-1742.html>