

PROXYGRAPHICS system variable

1771 GstarCAD MY /KW July 23, 2021 [System Variables](#) 0 684

Function Description:

The **PROXYGRAPHICS** system variable is used to specify whether to save images in proxy to drawings.

Type : Integer

Saved in : Drawing

Initial value : 1

Range : 0,1

System Variable Value:

0 : do not save images in proxy to drawings, but only display the frame.

1 : save images in proxy to drawings.

Online URL: <https://kb.gstarcad.com.my/article/proxygraphics-system-variable-1771.html>