

QCSTATE system variable

1785 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 718

Function Description:

The **QCSTATE** system variable is used to specify whether the quick calculation is on or off.
(Read-Only)

Type : Integer

Saved in : Drawing

Initial value : Unknown

Range : 0,1

System Variable Value:

0 : off

1 : on

Online URL: <https://kb.gstarcad.com.my/article/qcstate-system-variable-1785.html>