

ROAMABLEROOTPREFIX system variable

1794 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 790

Function Description:

The **ROAMABLEROOTPREFIX** system variable is used to store the complete path for root folders, in which installed files that can be roamed and customized.

(Read-Only)

Type : Strings

Saved in : Registry

Initial value : Unknown

Online URL: <https://kb.gstarcad.com.my/article/roamablerootprefix-system-variable-1794.html>