

SHADEDIF system variable

1811 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 820

Function Description:

The **SHADEDIF** system variable is used to set the ratio of diffuse reflective light and environment light.

Type : Integer

Saved in : Drawing

Initial value : 70

When specified **SHADEDGE** to be 0 or 1, the **SHADEDIF** becomes percentage of diffuse reflective light.

Online URL: <https://kb.gstarcad.com.my/article/shadedif-system-variable-1811.html>