

SKETCHINC system variable

1818 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 645

Function Description:

The **SKETCHINC** system variable is used to set the record increment for **SKETCH** command.

Type : Integer

Saved in : Drawing

Initial value : 0.1000 (Imperial) or 1.0000 (Metric)

Online URL: <https://kb.gstarcad.com.my/article/sketchinc-system-variable-1818.html>