

SNAPANG system variable

1825 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 703

Function Description:

The **SNAPANG** system variable is used to set the snap and grid rotation angle in current viewport relative to current UCS settings.

Type : Real

Saved in : Drawing

Initial value : 0.0000

In specifying a none zero value for **SNAPANG** system variable, it will not display straight line grid.

Online URL: <https://kb.gstarcad.com.my/article/snapang-system-variable-1825.html>