

# SNAPISOPAIR system variable

1827 GstarCAD MY /KW July 26, 2021 [System Variables](#) 0 831

## Function Description:

The **SNAPISOPAIR** system variable is used to control the isometric plane for current viewport.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2

## System Variable Value:

**0** : left

**1** : top

**2** : right

Online URL: <https://kb.gstarcad.com.my/article/snapisopair-system-variable-1827.html>