

## SSMAUTOOPEN system variable

1838 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 653

### Function Description:

The **SSMAUTOOPEN** system variable is used to control the display behavior of Sheet Set Manager when opening a drawing associated with sheet sets.

**Type :** Integer

**Saved in :** User-settings

**Initial value :** 1

**Range :** 0,1

### System Variable Value:

**0** : do not open its sheet set automatically

**1** :open its sheet set automatically

Online URL: <https://kb.gstarcad.com.my/article/ssmautoopen-system-variable-1838.html>