

## SURFTAB1 system variable

1849 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 870

### Function Description:

The **SURFTAB1** system variable is used to set how many tables will be generated by RULESURF and TABSURF commands.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 6

It also set the mesh density in M direction for **REVSURF** command.

Online URL: <https://kb.gstarcad.com.my/article/surftab1-system-variable-1849.html>