

TEXTSTYLE system variable

1874 GstarCAD MY /KW July 27, 2021 [System Variables](#) 0 1044

Function Description:

The **TEXTSTYLE** system variable is used to set the name for current text style.

Type : Strings

Saved in : Drawing

Initial value : Standard

Online URL: <https://kb.gstarcad.com.my/article/textstyle-system-variable-1874.html>