

UCSAXISANG system variable

1893 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 843

Function Description:

The **UCSAXISANG** system variable is used to store the default angle when rotating the UCS around one of its axis by using the X, Y, or Z options of USC command.

Type : Integer

Saved in : Registry

Initial value : 90

Range : 5,10,15,18,22.5,30,45,90,180

The value of **UCSAXISANG** system variable must be entered as an angle in degrees.

Online URL: <https://kb.gstarcad.com.my/article/ucsaxisang-system-variable-1893.html>