

# VIEWMODE system variable

1908 GstarCAD MY /KW July 28, 2021 [System Variables](#) 0 929

## Function Description:

The **VIEWMODE** system variable is used to store view settings of current viewport.  
(Read-Only)

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2,4,8,16

## System Variable Value:

**0** : turn off

**1** : perspective view active

**2** : turn clipping front on

**4** : turn clipping back on

**8** : turn on UCS follow mode

**16** : front clipping is not at eye. If this system variable is on, the front clip distance ( **FRONTZ**) determines the front clipping plane. If this system variable is off, **FRONTZ** is ignored, and the front clipping plane is set to pass through the camera point (vectors behind the camera are not displayed). This flag is ignored if the front-clipping bit (2) is off.

Online URL: <https://kb.gstarcad.com.my/article/viewmode-system-variable-1908.html>