XLOADPATH system variable

1928 GstarCAD MY /KW July 28, 2021 System Variables 0 574

Function Description:

The **XLOADPATH** system variable is used to create the path for store temporary copy of xref when demand-loading.

Type : Strings Saved in : Registry Initial value : Unknown

Online URL: https://kb.gstarcad.com.my/article/xloadpath-system-variable-1928.html