

BVSTATE command


2023 GstarCAD MY /KW August 5, 2021 [CAD Commands](#) 0 1048

The **BVSTATE** command is used to create, set or remove visibility states from dynamic block.

Command Access:

Command : BVSTATE

Function Description:

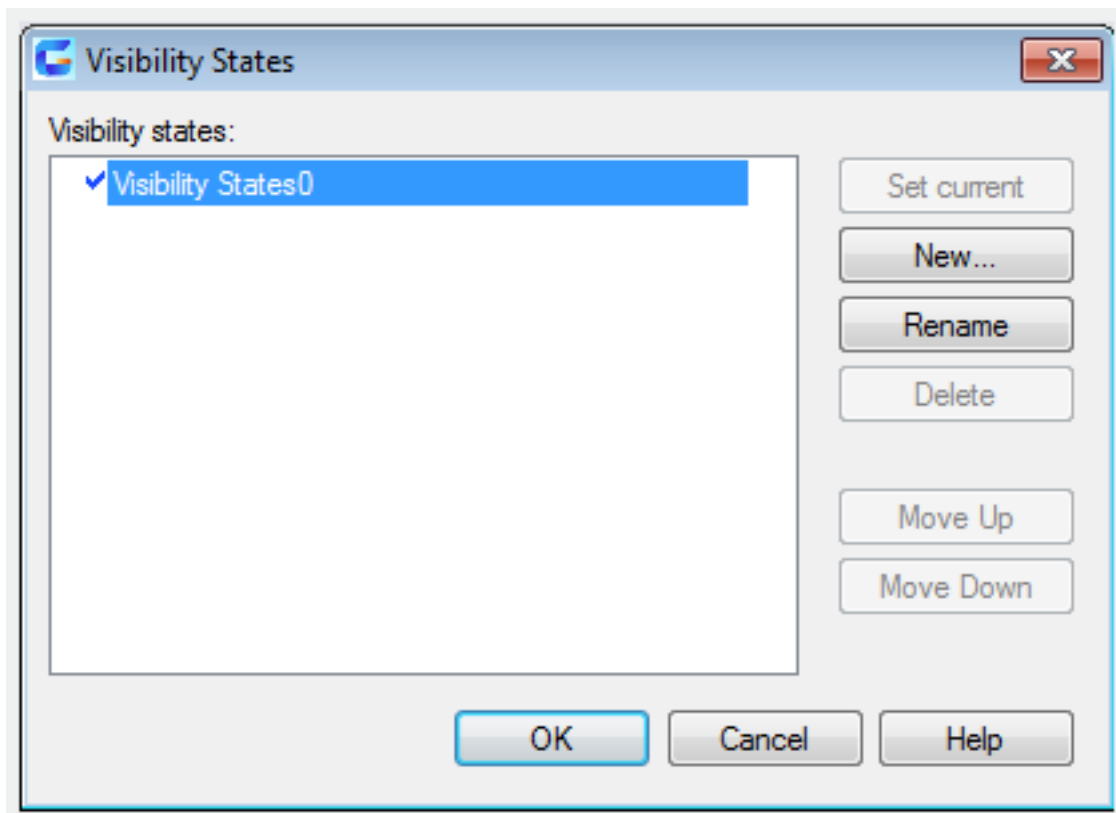

After inserting visibility parameter to block definition, users could edit it in "Visibility States" dialog box.

Online URL: <https://kb.gstarcad.com.my/article/bvstate-command-2023.html>